



RICOH PRODUCT QUICK GUIDE

ENABLING RICOH FAX CONFIRMATION PAGE


- Select Settings/User Tools

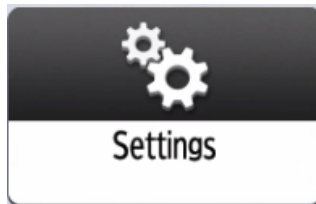


- Select Machine Features

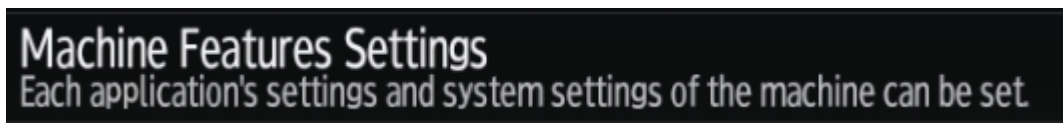


- Login (Button is located at the top right-hand corner)
 - Username: admin
 - Password: (leave it blank)

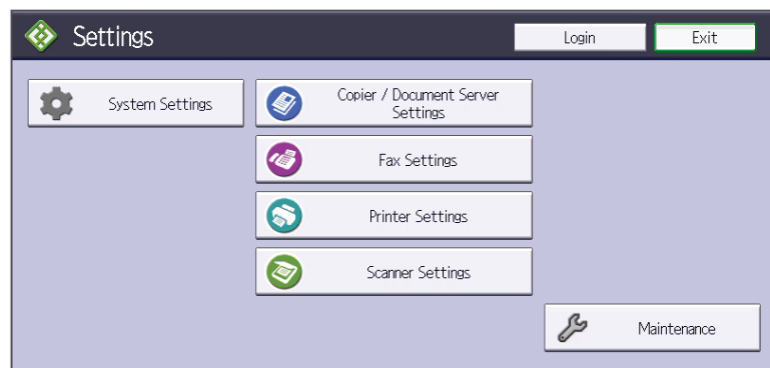


- Select Fax Settings
- Select Initial Settings
- Select Parameter Settings

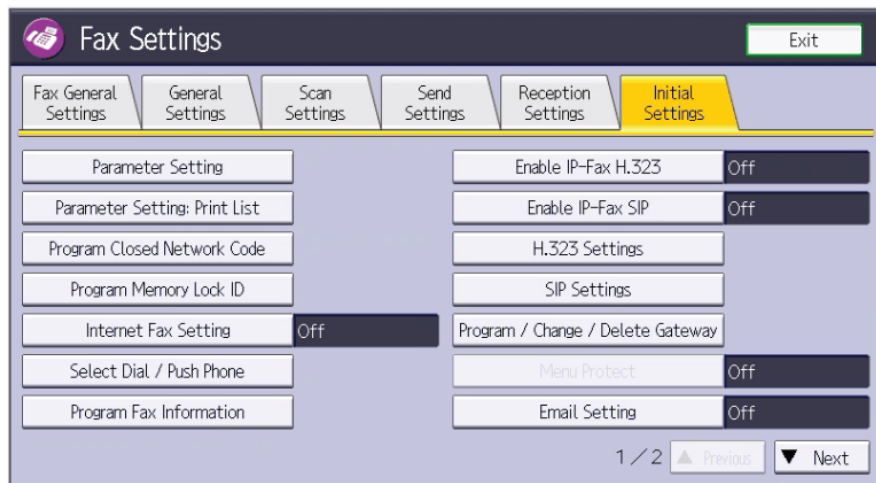

- Select the number 03

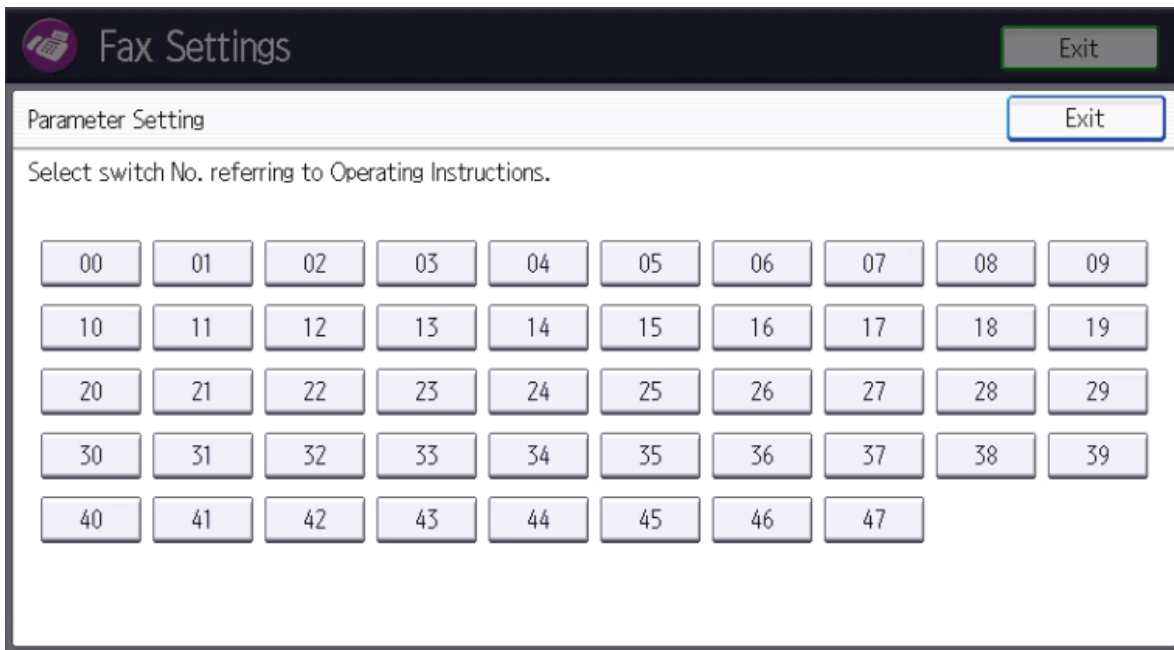

- Locate the descending numbers 7-0
 - Find the number 0
 - Tap the 0 (This will put a number 1 above it)

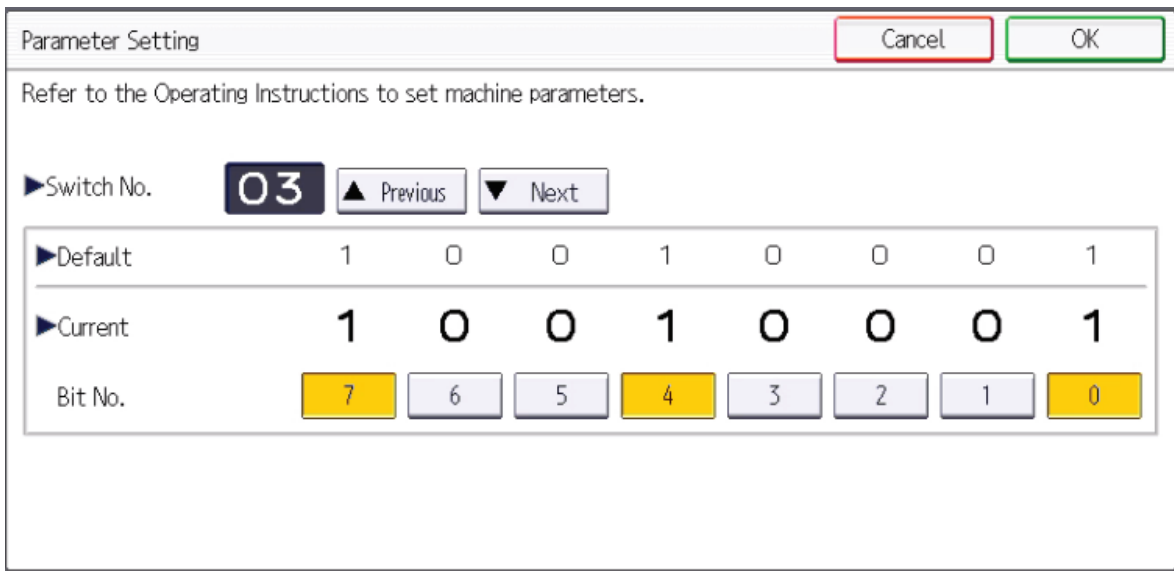

- Select OK